


How everything works...

Dishwasher user guide

Touch screen

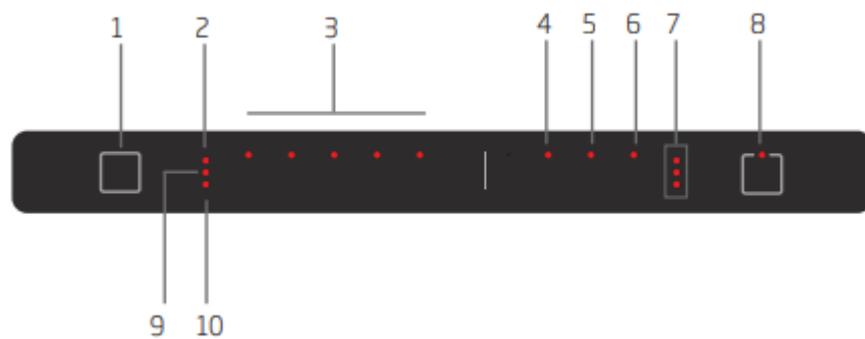

1. On/Off Key
2. Rinse Aid Indicator
3. Programme Indicators / Water Overflow Warning (P1 Flashes)
4. Tablet detergent function
5. Half Load function
6. Delayed Start Key
7. Time Delay Countdown Indicator
8. Start / Pause / Cancel Key
9. Salt Indicator
10. Water Cut-off Indicator





On/Off key

When you press the On/Off key, the product that is in the On position will switch on with the Eco programme.

Programme Selection / Programme Cancel key

Select the programme by pressing the desired programme key.

Press the Start / Pause / Cancel key for 3 seconds to cancel the running programme.

Function Keys

If you press any of the Function keys during programme selection or time delay selection, the indicator of the function will flash if the programme you have selected supports the selected function.

To cancel the selected function, press the function key again.


Programme Table					
Programme number	1	2	3	4	5
Programme name	Eco *	Intensive	Quick&Shine	Mini	Prewash
Cleaning temperature	50 °C	70 °C	60 °C	35 °C	-
Degree of Soiling	Most economical washing programme for the medium soiled daily dishes that are kept waiting.	Suitable for heavily soiled dishes, pots and pans.	Daily washing programme for normally soiled dishes in the fastest way.	Suitable for lightly soiled daily dishes that are scraped or pre-cleaned.	Suitable for removing the remnants on the soiled dishes that will be kept waiting in the machine for a few days, and thus, for preventing the bad odour buildup.
	Medium	High	Low - Medium	Low	-
Prewash	+	+	-	-	+
Wash	+	+	+	+	-
Dry	+	+	+	-	-
Duration (min)	210	120	58	30	15
Water (l)	11,5	17,6	11,8	11,8	4,2
Energy (kWh)	1,03	1,65	1,20	0,80	-





Forest Holidays

Hob instructions: Beko Hcc64103

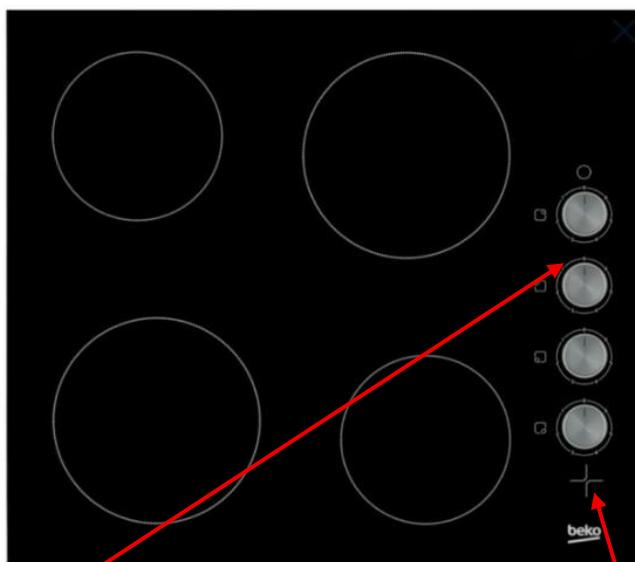

Control Knobs Operation light and hot zone indicator

The Hob control Knobs are used for operating the plates.
To Obtain the desired cooking power turn the control
knobs to the corresponding level.

1 – warming 2-3 – stewing / simmering 4-6 – Boiling
When finished, turn the Knobs off to the upper position.

