

## How everything works...



Forest Holidays

### Dishwasher user guide- Beko

#### DAILY USE

- Press the on/off button to activate the appliance.
- Clear any food and rinse plates etc before loading. Load the baskets, place tablet in tablet drawer.
- Press continuously the programe button until the indicator of the programe you want to set comes on.
- Shut door for wash to begin automatically.
- The end of the wash cycle is indicated by beeps and by the flashing of the indicator light of the selected program.
- Open the door and switch off the appliance by pressing the ON/OFF button.

#### MODIFYING A RUNNING PROGRAME

- If a wrong program was selected, it is possible to change it, provided that it has only just begun open the door (beware of HOT steam!), press the ON/OFF button, the machine will switch off. Switch the machine back on using the ON/OFF button and select the new wash cycle and any desired options; start the cycle by closing the door.

#### ADDING EXTRA CROCKERY

- Without switching off the machine, open the door (beware of HOT steam!), taking care to avoid the escaping steam, and place the crockery inside the dishwasher. Close the door and the cycle will begin from the point at which it was interrupted.

#### ACCIDENTAL INTERRUPTIONS

- If the door is opened during the wash cycle, or if there is a power cut, the cycle stops. It starts again from the point at which it was interrupted once the door has been closed or the electricity supply is restored.

#### CONTROL PANEL



On/off button. Programme button.

