

# How everything works...

## Oven user guide - Beko

Your oven has three dials. To operate the oven or grill, all three must be used.

- The middle dial (timer) must be moved for your oven to work. Turn it anticlockwise to use the oven for an unlimited time or turn it clockwise to set a specific cooking time.
- Next select the oven or grill function you want to use (see diagram below).
  1. Off
  2. Light
  3. Defrost
  4. Oven
  5. Grill
  6. Grill with Fan
- Finally turn the temperature dial to the desired temperature and you're ready to cook!

