



How everything works...

Nespresso Coffee Machine

- This machine operates with Nespresso Vertuo capsules only. **Nespresso classic capsules cannot be used in this machine.**
- Fill the water tank with fresh drinking water and place it into its position ensuring it “clicks” into place.
- Should the machine need descaling (indicated by a yellow light), please contact the Retreat and our team will be happy to help.

Operating Instructions

- For an optimized heating time, close and lock the machine to turn the machine ON. If the machine is already closed and locked, turn the machine ON by pressing the button.
- Light will blink while the machine is heating up. Steady light indicates the machine is ready.
- The factory settings for the coffee sizes are the following.
 - Alto: 14 fl oz. / 414 ml
 - Mug: 7.77 fl oz. / 230 ml
 - Gran Lungo: 5.07 fl oz. / 150 ml
 - Double Espresso: 2.7 fl oz. / 80 ml
 - Espresso: 1.35 fl oz. / 40 ml
- Never lift the lever during operation to avoid possible harm.
- Adjust position in height of the cup support. The cup support has 3 positions and can be temporarily removed to accommodate various cup sizes. Make sure the cup support is properly secured.
- Unlock and open the machine head completely.
- Insert a capsule with the dome shape at the bottom. Be careful not to injure yourself on sharp points or trap your fingers when reaching inside the machine.
- Close the head and lock the machine by turning the handle left to the lock symbol on the machine head.
- Place a cup of sufficient capacity under the coffee outlet. Risk of scalding may occur due to overflowing.
- Push the button to start the coffee preparation. It will take some time before the coffee flow comes out (due to barcode reading, coffee pre-wetting and infusion time).
- To stop the coffee flow early, push the button. To manually top up your coffee, push the button and push again to stop when desired volume is reached.
- Please wait until coffee preparation is done to unlock the handle and / or switch off the machine. Turn the handle to the right and open the head to automatically eject the capsule.





Forest Holidays

Nespresso Vertuo Coffee Machine



NESPRESSO®

