


Oven Instructions

Oven control

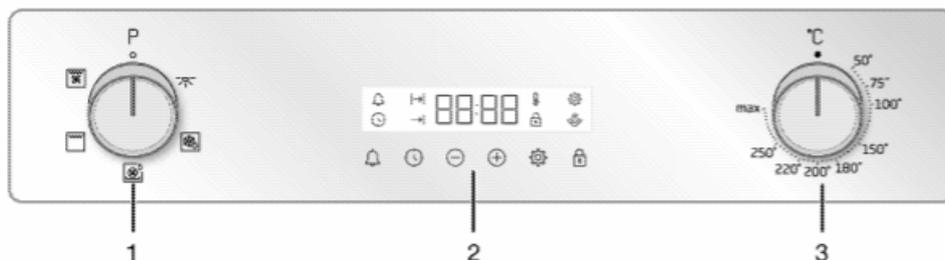


1. Function selection knob
2. Timer
3. Temperature knob

You can select the oven operating functions with the function selection knob. Turn left or right from closed (top) position to select. The fan oven function is on the bottom (down).

You can select the temperature you would like to cook with the temperature knob. Turn clockwise from closed (top) position to select.

Timer

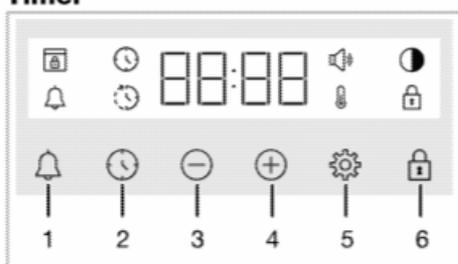

- 1 Alarm key
- 2 Time setting key
- 3 Decrease key
- 4 Increase key
- 5 Settings key
- 6 Key lock key

Display symbols

-  : Cooking time symbol
-  : Cooking end time symbol
-  : Alarm symbol
-  : Brightness symbol
-  : Key lock symbol
-  : Temperature symbol
-  : Volume symbol

