




How everything works...

Dishwasher user guide

- Select the On/Off key to turn on the appliance.
- **Programme Selection / Programme Cancel Key**
Select the programme by pressing the desired programme key.
Press and hold the Start / Pause / Cancel key for 3 seconds to cancel the running programme.
- **Function Keys**
If you press any of the Function keys during programme selection or time delay selection, the indicator of the function will flash if the programme you have selected supports the selected function.
To cancel the selected function, press the function key again.
- **Programme Selection**
 1. Press the On/Off button to turn on your machine.
 2. Refer to the Programme Table to determine a washing programme suitable for your dishes.
 3. Selected programme will start when you close the door of your machine.
 4. If the door is opened during a cycle, press start again to resume the cycle then close the door.

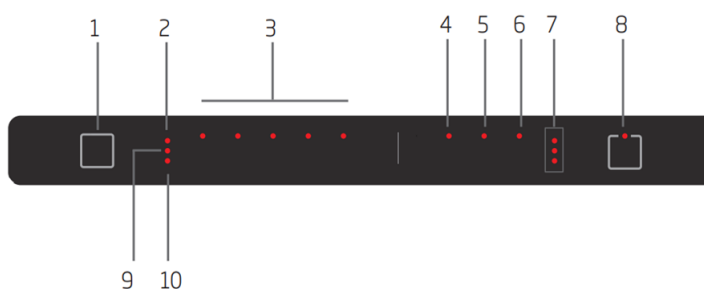

1. On/Off Key
2. Rinse Aid Indicator
3. Programme Indicators / Water Overflow Warning (P1 Flashes)
4. Fast+ Function
5. Extra Drying Function
6. Delayed Start Key
7. Time Delay Countdown Indicator
8. Start / Pause / Cancel Key
9. Salt Indicator
10. Water Cut-off Indicator

