

How everything works...

Oven user guide

Your oven has three dials. To operate the oven or grill, all three must be used.

- The middle dial (timer) must be moved for your oven to work. Turn it anticlockwise to use the oven for an unlimited time or turn it clockwise to set a specific cooking time.
- Next select the oven or grill function you want to use (see diagram below).
 1. Off
 2. Light
 3. Defrost
 4. Oven
 5. Grill
 6. Grill with Fan
- Finally turn the temperature dial to the desired temperature and you're ready to cook!

